



RT10W

Rugged Tablet with Windows 10 IoT

Quick Start Guide

Out of the Box

Make sure that your shipping box contains these items:

- RT10W rugged tablet
(Model RT10WL00 or RT10WL10)
- Rechargeable 7.7 VDC Li-polymer battery
- Power supply (power cord sold separately)
- Stylus
- Product Documentation


If you ordered accessories for your tablet, verify that they are also included with the order. Be sure to keep the original packaging in case you need to return the tablet for service.


Note: *RT10WL00 models do not include a WWAN radio.*

Memory Card Specifications

Honeywell recommends the use of Single Level Cell (SLC) industrial-grade microSD™ or microSDXC™ memory cards with RT10 tablets for maximum performance and durability. Contact a Honeywell sales representative for additional information on qualified memory card options.

Tablet Features

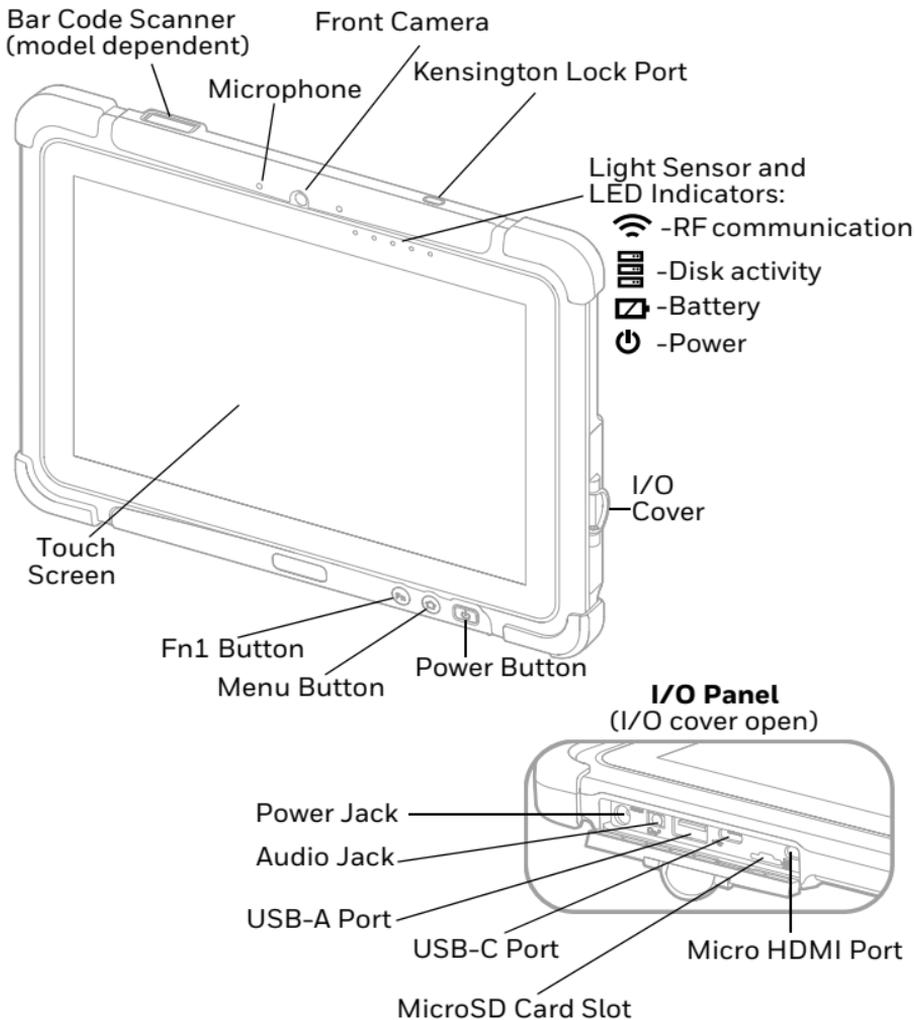






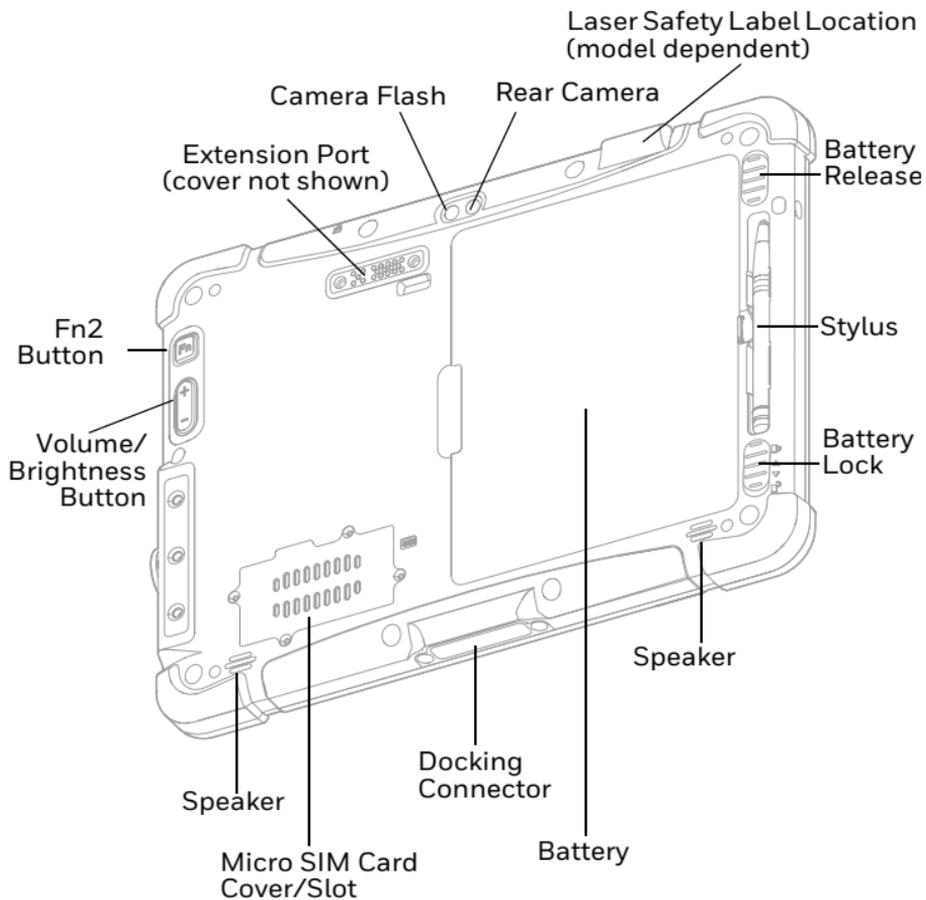






Install a Micro SIM Card

Only RT10WL10 (WWAN) models support micro SIM card use for cellular phone features.



Do not squeeze or disconnect cables when removing or inserting the 3G/LTE module.

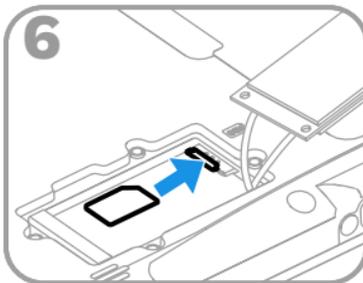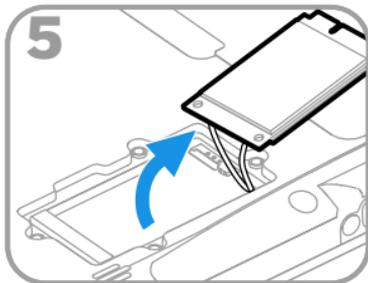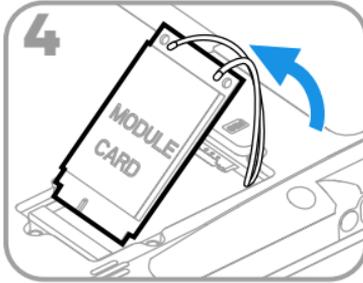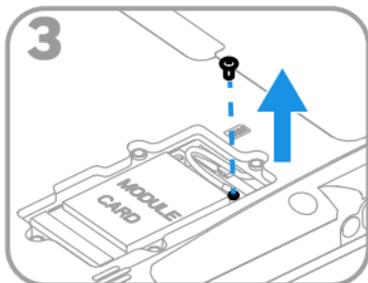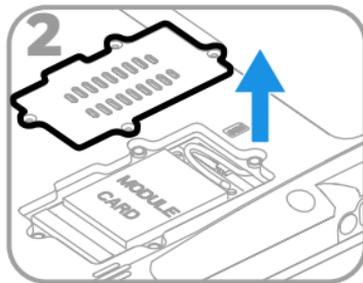
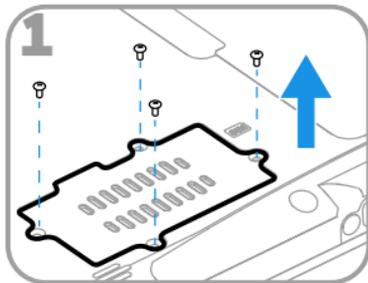


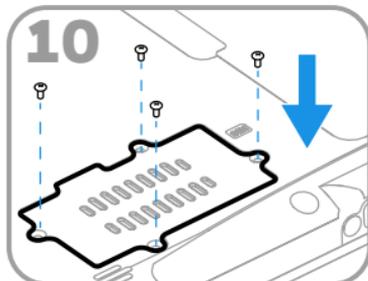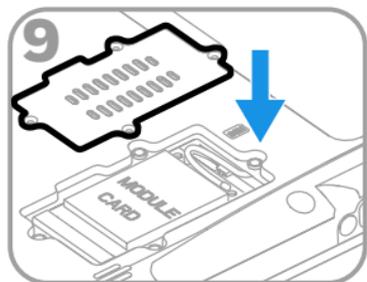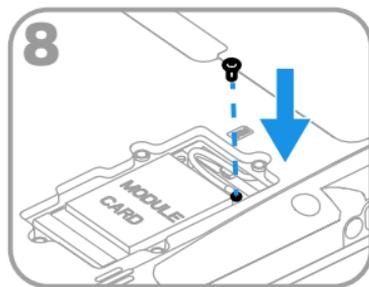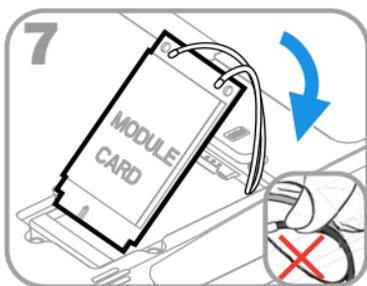

Note: Always power off the tablet before attempting to install or remove a card.

Install a microSD Card (Optional)


Note: Format the microSD card before initial use.

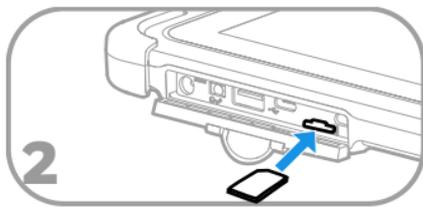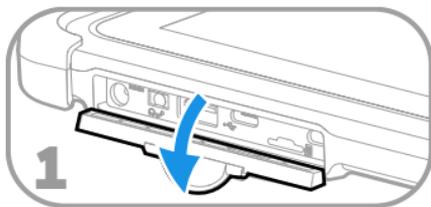

Note: Always power off the tablet before attempting to install or remove a card.

Install the Battery

The RT10W ships with a Li-poly 7.7 VDC, 45.43 watt-hour battery manufactured for Honeywell International Inc.

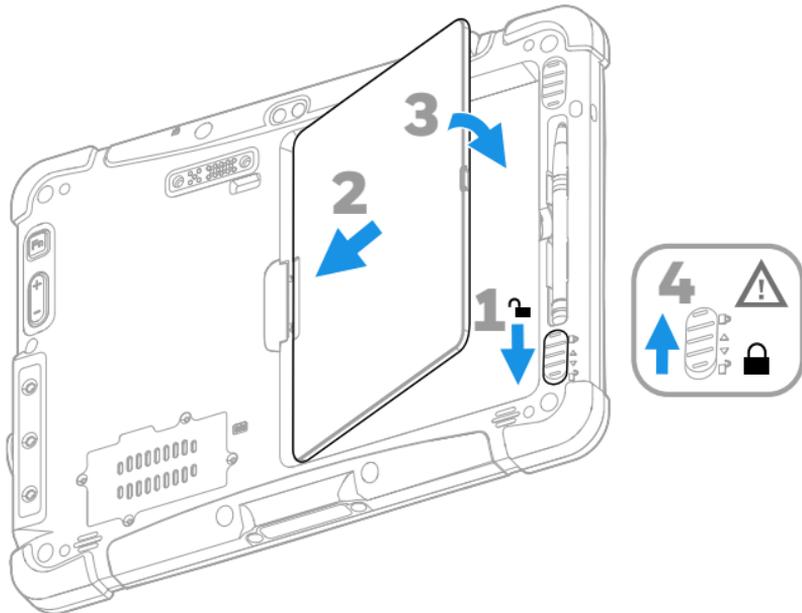



Ensure all components are dry prior to placing the battery in the computer. Mating wet components may cause damage not covered by the warranty.

Charge the Tablet

The RT10 rugged tablet ships with a partially charged battery. Charge the battery for a minimum of 6 hours.



We recommend using AC power when you start the tablet for the first time.



Before you attempt to use, charge or replace the battery in the device, carefully read all labels, markings and product documentation provided in the box or online at sps.honeywell.com. To learn more about Battery Maintenance for Portable Devices, go to honeywell.com/PSS-BatteryMaintenance.



We recommend use of Honeywell Li-poly or Li-ion battery packs. Use of any non-Honeywell battery may result in damage not covered by the warranty.

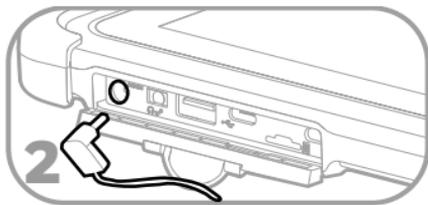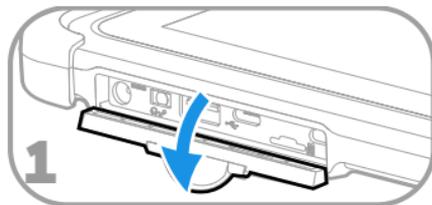

We recommend the use of Honeywell accessories and power adapters. Use of any non-Honeywell accessories or power adapters may cause damage not covered by the warranty.



Ensure all components are dry prior to mating the computers and batteries with peripheral devices. Mating wet components may cause damage not covered by the warranty.

Set Up the Tablet for the First Time



If a power interruption occurs during Windows set up, access the Recovery menu by pressing the Fn1 button.

The first time you power on the tablet, a Welcome screen appears. Once setup is complete, the Welcome screen no longer displays on startup.

1. Press and hold the **Power** button for approximately 3 seconds until the blue LED power indicator lights up.
2. Using your finger or the stylus, select your region and then touch **Yes**.
3. Follow the on-screen prompts to finish setting up the tablet.

Turn the Power On or Off

To turn the tablet on:

- Press and hold the **Power** button for approximately 3 seconds until the blue LED power indicator lights up.



Do not press the power button repeatedly.



Do not attempt to connect or disconnect the AC adapter or press the tablet's screen, buttons or external keyboard/mouse until the Disk Activity indicator turns off.

To turn the tablet off:

1. Touch .
2. Touch .
3. Touch **Shut down**.

Battery Replacement

Hot Swap

The RT10W Tablet has an internal backup battery that is charged with the main battery. This battery cannot be removed and requires adequate power for main battery hot swapping. When the backup battery is fully charged, the tablet can sustain up to 5 minutes of runtime for battery hot-swapping.

1. Press the Menu button or double-tap  to open the Hottab app.
2. Touch  **Setting** to check the power level of the backup battery.
3. If the backup battery level is at least medium, remove the main battery. Otherwise, charge the tablet until the backup battery level is medium or higher before removing the main battery.
4. Insert a new, fully charged battery into the battery compartment.



Charge the built-in backup battery every two months to maintain battery health and prevent possible issues from battery over-discharge.

Sleep Mode

Sleep mode automatically turns the touch panel display off and locks the tablet to save battery power when the tablet is inactive for a programmed period of time.

1. Press and hold the **Power** button to wake the tablet.
2. Swipe up from the bottom of the screen to unlock the tablet.

Adjust the Display Sleep Time

To adjust the amount of time before the display sleeps after inactivity:

1. Touch .
2. Touch .
3. Touch **Personalization** and then **Lock screen**.
4. Scroll down and touch **Screen timeout settings**.
5. Select an amount of time from the drop-down list.
6. Close the window to return to the Home screen.

About the Home Screen

To learn how to customize the Home screen, see the user guide.



Hottab Utility

Use Hottab to control all main functions of your tablet. When Windows starts up Hottab runs in the background.

To display the Hottab interface, press the  button or double-tap  on the Home screen. The Hottab interface will display on the right side of the Home screen.

Icon	Description
	Configure short cuts to quickly access programs.

Icon	Description
	Take a picture, record a video, or adjust camera settings.
	Enable/disable hardware functions such as Wi-Fi, WWAN (3G/4G/LTE), GPS, Bluetooth, camera, LED indicators, RFID reader, and GPS antenna outing.
	Display battery status and device settings such as power management and function key mapping.

Navigation and Function Buttons

For button locations, see [Tablet Features](#).


Button	Name	Description
	Fn1	Programmable shortcut button. (The default is the web browser.)
	Menu	Display or hides the Hottab interface.
	Power	See page 8 .

Button	Name	Description
	Fn2	Programmable shortcut button.(The default is the camera app.)
	Volume/ Brightness	Raise or lower the volume or brightness.

Scan a Barcode

For optimum performance, avoid reflections by scanning the barcode at a slight angle.

1. Point the tablet at the barcode.
2. Press the Fn2 button.
Center the aiming beam over the barcode.
3. Release the Fn2 button.

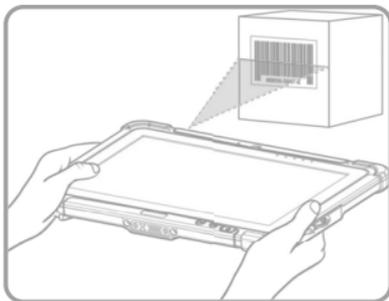

Restart the Tablet

You may need to restart the tablet to correct conditions where an application stops responding to the system or the tablet seems to be locked up.

- Press and hold the **Power** button for 6 seconds or longer.

Support

To search our knowledge base for a solution or log into the Technical Support Portal and report a problem, go to honeywell.com/PSStechnicalsupport.

Documentation

Product documentation is available at sps.honeywell.com.

Limited Warranty

For warranty information, go to sps.honeywell.com and click **Support > Productivity > Warranties**.

Trademarks

Microsoft, Windows and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names or marks mentioned in this document may be trademarks or registered trademarks of other companies and are property of their respective owners.

Patents

For patent information, see www.hsmpats.com.

Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. HII makes no representation or warranties regarding the information provided in this publication.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright ©2023 Honeywell Group of Companies. All rights reserved.